

# ALPHABETICAL INDEX

# SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

**IDX**

# ALPHABETICAL INDEX

## A

ABS (anti-lock brake system) .....	BR-28
ABS - Wiring diagram .....	BR-37
ABS/TCS C/U signal .....	EC-498
Absolute pressure sensor .....	EC-130
A/C air flow .....	HA-18
A/C component location .....	HA-17
A/C compressor clutch removal and installation .....	HA-129
A/C compressor description .....	HA-13
A/C compressor mounting .....	HA-128
A/C compressor precaution .....	HA-7
A/C compressor special service tool .....	HA-7
A/C control linkage adjustment (auto A/C) .....	HA-107
A/C control operation (auto A/C) .....	HA-61
A/C control operation (manual A/C) .....	HA-19
A/C diagnostic work flow (auto A/C) .....	HA-64
A/C diagnostic work flow (manual A/C) .....	HA-21
A/C HFC134a (R134a) system precaution .....	HA-3
A/C HFC134a (R134a) system service procedure .....	HA-120
A/C HFC134a (R134a) system service tools .....	HA-8
A/C HFC134a system service equip- ment precaution .....	HA-10
A/C lubricant (R134a) .....	HA-122
A/C operational check (auto A/C) .....	HA-65
A/C operational check (manual A/C) .....	HA-22
A/C performance chart (manual A/C) .....	HA-33
A/C performance test diagnoses (manual A/C) .....	HA-31
A/C relay (auto A/C) .....	HA-106
A/C relay (manual A/C) .....	HA-56
A/C self-diagnoses (auto A/C) .....	HA-70
A/C service data specification .....	HA-133
A/C switch (manual A/C) .....	HA-55
A/C symptom chart (auto A/C) .....	HA-68
A/C symptom chart (manual A/C) .....	HA-24
A/C system description (auto A/C) .....	HA-108
A/C trouble diagnoses (auto A/C) .....	HA-64
A/C trouble diagnoses (manual A/C) .....	HA-21
A/C, A - Wiring diagram (auto A/C) .....	HA-90
A/C, M - Wiring diagram (manual A/C) .....	HA-40
Accelerator control system .....	FE-2
Accelerator wire adjustment .....	FE-2
Air bag .....	RS-9
Air bag disposal .....	RS-20
Air bag precautions .....	GI-2
Air bleeding (hydraulic clutch) .....	CL-6
Air bleeding for brake system .....	BR-6
Air cleaner filter replacement .....	MA-13
Air conditioner cut control .....	EC-24
Air flow meter - See Mass air flow sensor .....	EC-122
Air mix door control linkage adjustment (auto A/C) .....	HA-107

Air mix door control linkage adjustment (manual A/C) .....	HA-57
Air mix. door motor (auto A/C) .....	HA-113
Air spoiler, rear .....	BT-22
Alternator .....	EL-33
Ambient sensor (auto A/C) .....	HA-110
Angular tightening application .....	EM-2
Antenna .....	EL-127
Anti-lock brake system - See ABS .....	BR-28
Anti-lock brake system - Wiring diagram .....	BR-37
ASCD (automatic speed control device) .....	EL-140
ASCD - Wiring diagram .....	EL-145
A/T - Wiring diagram .....	AT-13
A/T fluid temperature sensor .....	AT-87, 153
A/T self-diagnoses .....	AT-42
A/T shift lock system .....	AT-180
A/T shift lock system - Wiring diagram .....	AT-181
A/T trouble diagnoses .....	AT-53
AT/C - Wiring diagram .....	EC-381, 501
Audio .....	EL-119
AUDIO - Wiring diagram .....	EL-121
Audio and A/C control removal and installation - See Instrument panel .....	BT-13
Auto air conditioner - Wiring diagram (auto A/C) .....	HA-90
Automatic speed control system - See ASCD .....	EL-140
Automatic transaxle number .....	GI-40
Automatic transmission fluid replacement .....	MA-18
Auxiliary air control (AAC) valve .....	EC-369

## B

Back-up lamp .....	EL-58
Back-up lamp switch (M/T) .....	MT-8
BACK/L - Wiring diagram .....	EL-58
Ball joint front axle .....	FA-6
Basic inspection .....	EC-92
Battery .....	EL-21
Baulk ring (M/T) .....	MT-12
Blower motor (auto A/C) .....	HA-106
Blower motor (manual A/C) .....	HA-55
Blower resistor (manual A/C) .....	HA-55
Board-on lift .....	GI-42
Body alignment .....	BT-44
Brake booster .....	BR-12
Brake control valve (Proportioning valve) .....	BR-8
Brake fluid change .....	BR-5
Brake fluid level .....	MA-19
Brake fluid level and line check .....	BR-5
Brake hydraulic line .....	BR-7
Brake inspection .....	MA-19
Brake lines and cables inspection .....	MA-19
Brake master cylinder .....	BR-10
Brake pedal .....	BR-9
Bulb specifications .....	EL-330
Bumper, front .....	BT-6

# ALPHABETICAL INDEX

Bumper, rear ..... BT-9  
 BUZZER - Wiring diagram ..... EL-88  
 BYPS/V - Wiring diagram ..... EC-483, 488

## C

Camshaft inspection ..... EM-40  
 Camshaft position sensor (CMPS) ..... EC-311  
 Camshaft position sensor (PHASE) ..... EC-311  
 Canister - See EVAP canister ..... EC-26  
 CHARGE - Wiring diagram ..... EL-31  
 Charging system ..... EL-30  
 Chassis and body maintenance ..... MA-17  
 CIGAR - Wiring diagram ..... EL-108  
 Cigarette lighter ..... EL-108  
 Circuit breaker ..... EL-15  
 Clock ..... EL-109  
 CLOCK - Wiring diagram ..... EL-109  
 Closed loop control ..... EC-408  
 Closed throttle position switch ..... EC-376  
 Clutch cover ..... CL-10  
 Clutch disc ..... CL-10  
 Clutch fluid level ..... MA-17  
 Clutch master cylinder ..... CL-7  
 Clutch operating cylinder ..... CL-8  
 Clutch pedal ..... CL-5  
 Clutch release bearing ..... CL-9  
 Clutch release mechanism ..... CL-9  
 Clutch withdrawal lever ..... CL-9  
 Coil spring (front) ..... FA-22  
 Coil spring (rear) ..... RA-11  
 Collision diagnosis ..... RS-58  
 Combination lamp, front, removal and  
 installation ..... BT-6  
 Combination lamp, rear, removal and  
 installation ..... BT-22  
 Combination meter ..... EL-69  
 Combination meter removal and instal-  
 lation - See Instrument panel ..... BT-13  
 Combination switch ..... EL-35  
 COMM - Wiring diagram ..... EL-180  
 Component Location (auto A/C) ..... HA-87  
 Compression pressure ..... EM-12  
 Compressor clutch removal and  
 installation ..... HA-129  
 Compressor description ..... HA-13  
 Compressor mounting ..... HA-128  
 Compressor precaution ..... HA-7  
 Compressor special service tool ..... HA-7  
 Connecting rod ..... EM-59  
 Connecting rod bearing clearance ..... EM-63  
 Connecting rod bushing clearance ..... EM-64  
 Connector inspection ..... GI-19  
 Console box - See Instrument panel ..... BT-13  
 CONSULT for ABS ..... BR-44  
 CONSULT for engine ..... EC-73  
 CONSULT general information ..... GI-35  
 Control lever (M/T) ..... MT-10  
 Control valve (A/T) ..... AT-218  
 Converter housing installation ..... AT-191

Coolant mixture ratio ..... MA-9  
 Coolant replacement ..... MA-11  
 Cooling circuit (engine) ..... LC-8  
 Cooling fan control ..... EC-504  
 Cooling fan control system ..... LC-15  
 Cooling fan motor ..... EC-516  
 Cooling fan relay ..... EC-516  
 Coupling sleeve (M/T) ..... MT-12  
 Crankshaft ..... EM-61  
 Crankshaft position sensor (POS) ..... EC-304  
 Crankshaft position sensor (POS)  
 chipping ..... EC-428  
 Crankshaft position sensor (REF) ..... EC-422  
 Cruise control - See ASCD ..... EL-140  
 Cylinder block ..... EM-57  
 Cylinder head ..... EM-37  
 Cylinder head bolt tightening ..... EM-46

## D

Daytime light system ..... EL-43  
 Daytime running light - See Daytime  
 light system ..... EL-43  
 DEF - Wiring diagram ..... EL-111  
 Detonation sensor - See Knock sensor ..... EC-300  
 Diagnosis sensor unit ..... RS-13  
 Differential gear (FF A/T) ..... AT-261  
 Differential gear (FF M/T) ..... MT-12, 26  
 Dimensions ..... GI-41  
 Direct ignition system ..... EC-40  
 Distributor ignition (DI) system ..... EC-23  
 D/LOCK - Wiring diagram ..... EL-215  
 Door lock ..... BT-11  
 Door mirror ..... BT-43  
 Door trim ..... BT-19  
 Door, front ..... BT-11  
 Door, rear ..... BT-12  
 Drive belt inspection ..... MA-10  
 Drive plate runout ..... EM-65  
 Drive shaft (front) ..... FA-13  
 Dropping resistor (A/T) ..... AT-131  
 DTRL - Wiring diagram ..... EL-45

## E

ECM input/output signal ..... EC-108  
 ECM-ABS/TCS COMM NG ..... EC-501  
 EGR temperature sensor ..... EC-435  
 EGR valve & EVAP canister purge con-  
 trol solenoid valve ..... EC-330  
 EGR volume control valve ..... EC-325  
 EGVC/V - Wiring diagram ..... EC-325  
 Electric sun roof ..... EL-133  
 Electrical diagnoses ..... GI-22  
 Electrical ignition system ..... EC-23  
 Electrical load signal circuit ..... EC-536  
 Electrical unit ..... Foldout  
 Engine compartment ..... BT-44

# ALPHABETICAL INDEX

Engine control circuit diagram.....	EC-11
Engine control component parts location .....	EC-14
Engine control module (ECM).....	EC-384
Engine control system diagram and chart.....	EC-12
Engine coolant temperature sensor (ECTS).....	EC-145, 161
Engine mounting control (Front) .....	EC-528
Engine oil filter replacement .....	MA-14
Engine oil precautions .....	GI-6
Engine oil replacement .....	MA-14
Engine outer component parts .....	EM-8
Engine removal.....	EM-54
Engine room - See Engine compartment .....	BT-44
Engine serial number .....	GI-40
EVAP canister .....	EC-26
EVAP canister vent control valve.....	EC-354
EVAP control system purge flow monitoring diagnosis .....	EC-471
EVAP vapor lines inspection.....	MA-16
Evaporative emission (EVAP) system.....	EC-26
Exhaust system .....	FE-4
Exhaust system inspection .....	MA-17
Exterior.....	BT-22

## F

Fan control amp. (auto A/C).....	HA-118
Fan switch (manual A/C).....	HA-55
Fast idle cam (FIC) inspection and adjustment .....	EC-39
F/FOG - Wiring diagram .....	EL-60
Final drive (FF A/T) .....	AT-261
Final drive (FF M/T) .....	MT-12, 26
Finisher, interior - See Trim .....	BT-16
Floor trim.....	BT-16
Flow charts .....	GI-32
Fluid temperature sensor (A/T).....	AT-87, 153
Fluids .....	MA-8
Flywheel (clutch).....	CL-11
Flywheel runout .....	EM-65
FO2H-L - Wiring diagram.....	EC-166, 174, 180, 186, 196
Fog lamp, front .....	EL-59
Fog lamp, front, removal and installation .....	BT-6
Fork rod (M/T) .....	MT-13
Forward clutch.....	AT-239
FRO2LH - Wiring diagram .....	EC-204
Front axle.....	FA-9
Front bumper .....	BT-6
Front combination lamp removal and installation .....	BT-6
Front disc brake .....	BR-14
Front door.....	BT-11
Front engine mounting control.....	EC-528
Front fog lamp .....	EL-59
Front fog lamp removal and installation .....	BT-6

Front heated oxygen sensor (HO2S).....	EC-166, 174, 180, 186, 196
Front heated oxygen sensor (HO2S) (Left bank).....	EC-166, 174, 180, 186, 196
Front heated oxygen sensor (HO2S) (Right bank) .....	EC-166, 174, 180, 186, 196
Front heated oxygen sensor (HO2S) monitor.....	EC-64, 67
Front heated oxygen sensor heater (Left bank) .....	EC-204
Front heated oxygen sensor heater (Right bank) .....	EC-204
Front passenger air bag.....	RS-9
Front seat.....	BT-27
Front seat belt .....	RS-4
Front suspension .....	FA-21
Front washer.....	EL-95
Front wiper .....	EL-95
Fuel cut control (at no load & high engine speed).....	EC-25
Fuel filler lid .....	BT-9
Fuel filter replacement .....	MA-13
Fuel gauge.....	EL-69
Fuel injection system (Left bank).....	EC-279, 285
Fuel injection system (Right bank) .....	EC-279
Fuel lid opener, electric .....	EL-139
Fuel line inspection.....	MA-12
Fuel precautions .....	GI-7
Fuel pressure check.....	EC-37
Fuel pressure release .....	EC-37
Fuel pump .....	EC-527
Fuel pump control module .....	EC-524
Fuel pump relay .....	EC-527
Fuel system .....	FE-3
FUELLH - Wiring diagram .....	EC-279, 285
Fuse.....	EL-15, Foldout
Fuse block .....	Foldout
Fusible link.....	EL-15, Foldout

## G

Garage jack and safety stand .....	GI-43
Gauges .....	EL-69
Gear components (M/T).....	MT-12
Generic scan tool (GST) .....	EC-86
Ground distribution .....	EL-16

## H

Harness connector.....	EL-3
Harness connector inspection .....	GI-19
Harness layout.....	EL-315
Hazard warning lamp.....	EL-52
Headlamp.....	EL-38
Headlamp removal and installation .....	BT-6
Headlining - See Roof trim .....	BT-20

# ALPHABETICAL INDEX

Heated oxygen sensor  
   (HO2S) (front)..... EC-166, 174, 180, 186, 196  
 Heated oxygen sensor (HO2S) (Front)  
   (Left bank)..... EC-166, 174, 180, 186, 196  
 Heated oxygen sensor (HO2S) (Front)  
   (Right bank) ..... EC-166, 174, 180, 196  
 Heated oxygen sensor (HO2S) monitor ..... EC-67  
 Heated oxygen sensor  
   (rear) ..... EC-210, 219, 227, 235  
 Heated oxygen sensor heater  
   (Front)(Left bank)..... EC-204  
 Heated oxygen sensor heater (Front)  
   (Right bank) ..... EC-204  
 Heated oxygen sensor monitor (HO2S)  
   (front) ..... EC-67  
 Heated seat..... BT-31, EL-137  
 Height (Dimensions)..... GI-41  
 HFC134a (R134a) system precaution ..... HA-3  
 HFC134a (R134a) system service  
   procedure..... HA-120  
 HFC134a (R134a) system service tools..... HA-8  
 HFC134a system service equipment  
   precaution ..... HA-10  
 High clutch..... AT-235  
 H/LAMP - Wiring diagram..... EL-39  
 Hood ..... BT-6  
 Horn ..... EL-107  
 HORN - Wiring diagram ..... EL-107  
 How to erase DTC for OBD system ..... EC-62  
 HSEAT - Wiring diagram ..... EL-137

## I

IACV-AAC valve ..... EC-375  
 Identification plate ..... GI-40  
 Idle air control valve (IACV)..... EC-369  
 Idle mixture ratio ..... EC-42  
 Idle speed..... EC-42  
 Ignition coil ..... EC-421  
 Ignition timing..... EC-42  
 ILL - Wiring diagram ..... EL-64  
 Illumination..... EL-62, 277  
 In vehicle sensor (auto A/C) ..... HA-109  
 Injector..... EC-521  
 Injector removal and installation ..... EC-38  
 Input shaft (FF M/T)..... MT-12, 17  
 Instrument panel..... BT-13  
 INT/L - Wiring diagram ..... EL-68  
 Intake air temperature sensor..... EC-139  
 Intake door control linkage adjustment  
   (auto A/C) ..... HA-107  
 Intake door control linkage adjustment  
   (manual A/C)..... HA-57  
 Intake door motor (auto A/C)..... HA-117  
 Intake manifold ..... EM-10  
 Intake sensor (auto A/C)..... HA-111  
 Integrated homelink transmitter ..... EL-310  
 Interior..... BT-16  
 Interior lamp on-off control..... EL-281

IVMS (In-Vehicle Multiplexing System) ..... EL-164  
 IVMS-System description ..... EL-164  
 IVMS-Trouble diagnoses ..... EL-183

## J

Jacking points..... GI-43  
 Joint connector (J/C) ..... Foldout  
 Junction box (J/B) ..... Foldout

## K

Key illumination..... EL-281  
 Keyless entry system - See Multi-re-  
   mote control system..... EL-232  
 Knock sensor (KS) ..... EC-300

## L

Length (Dimensions) ..... GI-41  
 License lamp..... EL-50  
 Lifting points ..... GI-44  
 Line pressure solenoid valve ..... AT-116, 127, 131  
 Line pressure test (A/T) ..... AT-61  
 Liquid gasket application ..... EM-2  
 Location of electrical units ..... EL-312  
 Lock, door ..... BT-11  
 Low and reverse brake ..... AT-245  
 Lubricant (R134a) A/C ..... HA-122  
 Lubricants ..... MA-8  
 Lubrication circuit (engine) ..... LC-4  
 Lubrication-locks, hinges and hood  
   latches..... MA-21

## M

Magnet clutch..... HA-129  
 Main drive gear (M/T) ..... MT-12  
 Mainshaft (M/T)..... MT-12, 22  
 Maintenance ..... MA-1  
 Maintenance (engine)..... MA-10  
 MAJOR OVERHAUL..... AT-193  
 Malfunction indicator lamp (MIL)..... EC-64  
 Manual air conditioner - Wiring diagram  
   (manual A/C)..... HA-40  
 Manual transaxle number..... GI-40  
 Manual transmission oil replacement..... MA-17  
 MAP/BARO switch solenoid valve ..... EC-386  
 Mass air flow sensor (MAFS)..... EC-122  
 Master cylinder (brake) ..... BR-10  
 Master cylinder (clutch) ..... CL-7  
 Meter..... EL-69  
 METER - Wiring diagram ..... EL-72  
 MIL & Data link connectors circuit ..... EC-539  
 MIRROR - Wiring diagram ..... EL-138

GI  
 MA  
 EM  
 LC  
 EC  
 FE  
 CL  
 MT  
 AT  
 FA  
 RA  
 BR  
 ST  
 RS  
 BT  
 HA  
 EL  
 IDX

# ALPHABETICAL INDEX

Mirror, door .....	BT-43
Mirror, out side .....	BT-43
Misfire .....	EC-295
Mode door control linkage adjustment (auto A/C) .....	HA-107
Mode door control linkage adjustment (manual A/C) .....	HA-56
Mode door motor (auto A/C) .....	HA-115
Model variation .....	GI-38
Molding - See Exterior .....	BT-22
M/T major overhaul .....	MT-11
M/T removal and installation .....	MT-8
Mud guard - See Exterior .....	BT-22
MULTI - Wiring diagram .....	EL-235
Multi-remote control system .....	EL-232
Multipoint fuel injection (MFI) system .....	EC-21
Multipoint fuel injection precautions .....	GI-5

## N

NATS (Nissan anti-theft system) .....	EL-295
NATS (Nissan anti-theft system) precautions .....	GI-3
NATS - Wiring diagram .....	EL-297
NVH troubleshooting (BR) .....	BR-4
NVH troubleshooting (CL) .....	CL-3
NVH troubleshooting (FA) .....	FA-4
NVH troubleshooting (M/T) .....	MT-5
NVH troubleshooting (RA) .....	RA-3
NVH troubleshooting (ST) .....	ST-5
NVIS (Nissan vehicle immobiliser system) .....	EL-295
NVIS (Nissan vehicle immobiliser sys- tem) precautions .....	GI-3

## O

Oil pan (engine) .....	EM-13
Oil pressure (engine) .....	LC-5
Oil pump (A/T) .....	AT-214
Oil pump (engine) .....	LC-5
Oil pump regulator valve (engine) .....	LC-7
Oil seal replacement (engine) .....	EM-34
On board diagnostic system .....	EC-50
Operating cylinder (clutch) .....	CL-8
ORVR (On-board Refueling Vapor Recovery) .....	EC-31
Out side mirror .....	BT-43
Overdrive control switch .....	AT-178
Overrun clutch .....	AT-239
Overrun clutch solenoid valve .....	AT-116, 127, 149
Oxygen sensor monitor (O2S) (front) .....	EC-67

## P

P/ANT - Wiring diagram .....	EL-128
Park/Neutral position switch .....	EC-493

Park/neutral position switch (M/T) .....	MT-8
Parking brake control .....	BR-26
Parking lamp .....	EL-50
PCV (positive crankcase ventilation) .....	EC-36
PGC/V - Wiring diagram .....	EC-459
PHONE - Wiring diagram .....	EL-132
Piston assembly .....	EM-65
Piston pin inspection .....	EM-58
Piston ring inspection .....	EM-59
Piston to bore clearance .....	EM-60
PNP switch .....	AT-80
POWER - Wiring diagram .....	EL-8
Power door lock .....	EL-213
Power door mirror .....	EL-138
Power seat .....	EL-135
Power steering fluid level .....	MA-20, ST-7
Power steering gear .....	ST-14
Power steering hydraulic pressure .....	ST-9
Power steering oil pressure switch .....	EC-531
Power steering oil pump .....	ST-24
Power steering system bleeding .....	ST-7
Power supply routing .....	EL-7
Power transistor .....	EC-421
Power transistor & ignition coil .....	EC-415
Power window .....	EL-198
Precautions (General) .....	GI-3
Pressure plate - See Clutch cover .....	CL-10
Pressure test (A/T) .....	AT-61

## R

Radiator .....	LC-15
Radio - See Audio .....	EL-119
Rear air spoiler .....	BT-22
Rear axle .....	RA-7
Rear bumper .....	BT-9
Rear disc brake .....	BR-18
Rear door .....	BT-12
Rear heated oxygen sensor (HO2S) .....	EC-210, 219, 227, 235
Rear heated oxygen sensor (HO2S) heater .....	EC-268, 274
Rear seat .....	BT-32
Rear seat belt .....	RS-5
Rear suspension .....	RA-10
Rear window defogger .....	EL-110
Refrigerant connection precaution .....	HA-4
Refrigerant general precaution .....	HA-3
Refrigerant lines .....	HA-124
Release bearing (clutch) .....	CL-9
Removal and installation (A/T) .....	AT-190
Reverse clutch .....	AT-232
Reverse idler shaft (M/T) .....	MT-12
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T) .....	MT-8
Reverse main gear (M/T) .....	MT-12
Revolution sensor (A/T) .....	AT-90
RO2H-L - Wiring diagram .....	EC-210
Road wheel size .....	GI-41
Roof trim .....	BT-20

# ALPHABETICAL INDEX

ROOM/L - Wiring diagram ..... EL-282  
 RRO2LH - Wiring diagram ..... EC-249, 268  
 RRO2RH - Wiring diagram ..... EC-242

## S

SAE J1930 terminology list ..... GI-47  
 SAE J1979 - Mode 1 - 7 ..... EC-50  
 Seal - See Exterior ..... BT-22  
 SEAT - Wiring diagram ..... EL-135  
 Seat belt inspection ..... MA-21, RS-6  
 Seat belt pre-tensioner ..... RS-9  
 Seat belt pre-tensioner disposal ..... RS-20  
 Seat belt, front ..... RS-4  
 Seat belt, rear ..... RS-5  
 Seat, front ..... BT-27  
 Seat, rear ..... BT-32  
 Self-diagnostic results ..... EC-64  
 SHIFT - Wiring diagram ..... AT-181  
 Shift control components (M/T) ..... MT-13  
 Shift fork (M/T) ..... MT-13  
 Shift lever ..... MT-10  
 Shift lock system ..... AT-180  
 Shift schedule ..... AT-285  
 Shift solenoid valve A  
 (A/T) ..... AT-97, 107, 116, 127, 135  
 Shift solenoid valve B  
 (A/T) ..... AT-97, 102, 116, 127, 139  
 Shock absorber (rear) ..... RA-11  
 Side air bag ..... RS-9  
 Side trim ..... BT-16  
 SMJ (super multiple junction) ..... Foldout  
 Spare tire size ..... GI-41  
 Spark plug replacement ..... MA-15  
 Speedometer ..... EL-69  
 Spiral cable ..... RS-15  
 Spot lamp ..... EL-68  
 Spring (Wheelarch) height ..... FA-6  
 SROOF - Wiring diagram ..... EL-134  
 SRS - See Supplemental Restraint  
 System ..... RS-9  
 SRS - Wiring diagram ..... RS-31  
 SRS Trouble diagnoses ..... RS-26  
 Stabilizer bar (front) ..... FA-23  
 Stall test (A/T) ..... AT-58  
 Standardized relay ..... EL-5  
 START - Wiring diagram ..... EL-26  
 Starter ..... EL-28  
 Starting system ..... EL-25  
 Steering gear and linkage inspection ..... MA-20  
 Steering linkage ..... ST-14  
 Steering switch ..... EL-37  
 Steering wheel and column ..... ST-10  
 Steering wheel play ..... ST-6  
 Steering wheel turning force ..... ST-8  
 Step lamp ..... EL-289  
 STEP/L - Wiring diagram ..... EL-290  
 Stop lamp ..... EL-56  
 STOP/L - Wiring diagram ..... EL-56  
 Striking rod (M/T) ..... MT-13

Strut (front) ..... FA-22  
 Sun roof, electric ..... EL-133  
 Sunload sensor (auto A/C) ..... HA-110  
 Sunroof ..... BT-33  
 Supplemental Restraint System ..... RS-9  
 Supplemental restraint system - Wiring  
 diagram ..... RS-31  
 S/VCSW - Wiring diagram ..... EC-410  
 SW/ILL - Wiring diagram ..... EL-278  
 Swirl control valve control solenoid  
 valve ..... EC-395  
 Swirl control valve control vacuum  
 check switch ..... EC-410  
 SWLV - Wiring diagram ..... EC-395  
 Symbols and abbreviations ..... GI-8  
 Synchronizer (M/T) ..... MT-12  
 System readiness test (SRT) code ..... EC-52

## T

Tachometer ..... EL-69  
 Tail lamp ..... EL-50  
 TAIL/L - Wiring diagram ..... EL-50  
 Tank fuel temperature sensor ..... EC-291  
 TCM circuit diagram ..... AT-12  
 TCM inspection table ..... AT-76  
 THEFT - Wiring diagram ..... EL-256  
 Theft warning system ..... EL-250  
 Thermostat ..... LC-14  
 Three way catalyst ..... EC-331, 334  
 Three way catalyst function  
 (Left bank) ..... EC-331, 334  
 Three way catalyst function  
 (Right bank) ..... EC-331, 334  
 Three way catalyst precautions ..... GI-5  
 Throttle bodies ..... EM-10  
 Throttle position sensor (TPS) ..... EC-150  
 Throttle position switch ..... AT-145, 179  
 Throwout bearing - See Clutch release  
 bearing ..... CL-9  
 Tie-rod ..... ST-18  
 Tie-rod ball joints ..... ST-18  
 Tightening torque of standard bolts ..... GI-46  
 Timing chain ..... EM-20  
 Tire rotation ..... MA-19  
 Tire size ..... GI-41  
 TLID - Wiring diagram ..... EL-139  
 Torque converter installation ..... AT-191  
 Torque convertor clutch solenoid  
 valve ..... AT-116, 120, 127  
 Tow truck towing ..... GI-45  
 Transmission case (M/T) ..... MT-11  
 TRANSMT - Wiring diagram ..... EL-310  
 Transverse link (front) ..... FA-24  
 Tread-FR&RR (Dimensions) ..... GI-41  
 Trim ..... BT-16  
 Triple pressure switch ..... HA-12  
 Triple pressure switch (auto A/C) ..... HA-106  
 Triple pressure switch (manual A/C) ..... HA-56  
 Trouble diagnoses ..... GI-32

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

EL

EL

EL

EL

EL

IDX

# ALPHABETICAL INDEX

Trunk lid .....	BT-9
Trunk lid opener - See Trunk lid.....	BT-9
Trunk lid opener, electric .....	EL-139
Trunk room lamp.....	EL-68
Trunk room trim .....	BT-21
TURN - Wiring diagram .....	EL-53
Turn signal lamp .....	EL-52
Two trip detection logic .....	EC-50
Two-pole lift .....	GI-44

## U

Under body .....	BT-46
------------------	-------

## V

Vacuum cut valve .....	EC-492
Vacuum hose (brake system) .....	BR-13
Vacuum hose drawing (Engine control) .....	EC-18
Valve clearance.....	EM-50
Valve guide .....	EM-41
Valve seat .....	EM-43
Valve spring .....	EM-44
Vehicle identification number .....	GI-39
Vehicle recovery (freeing a stuck vehicle).....	GI-45
Vehicle speed sensor (VSS) .....	EC-365
VENT/V - Wiring diagram .....	EC-466, 477
Viscosity number (SAE).....	MA-8
Viscous coupling (FF A/T).....	AT-261
Viscous coupling (FF M/T).....	MT-8, 12

## W

WARN - Wiring diagram .....	EL-82
Warning buzzer.....	EL-87
Warning lamps .....	EL-81
Washer, front.....	EL-95
Water pump .....	LC-10
Water temperature gauge.....	EL-69
Weatherstrip - See Exterior .....	BT-22
Wheel alignment (front) .....	FA-7
Wheel alignment (rear) .....	RA-6
Wheel balance .....	MA-19
Wheel bearing (front axle) .....	FA-7
Wheel bearing (rear) .....	RA-5
Wheel hub (rear).....	RA-7
Wheel sensors (ABS).....	BR-31
Wheel size .....	GI-41
Wheelarch height.....	FA-6
Wheelbase (Dimensions) .....	GI-41
Wide open & closed throttle position switch.....	EC-150
Width (Dimensions) .....	GI-41
WINDOW - Wiring diagram .....	EL-200
Window antenna .....	EL-129
WIPER - Wiring diagram .....	EL-97
Wiper, front .....	EL-95
Wiring Diagram (Cell code) list.....	EL-331
Wiring diagrams .....	GI-10
Withdrawal lever (clutch) .....	CL-9
Wrist pin - See Piston pin inspection .....	EM-58