

ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LG

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ALPHABETICAL INDEX

A

AAC/V - Wiring diagram.....	EC-432	A/C self-diagnoses (auto A/C).....	HA-37
ABS (anti-lock brake system).....	BR-39	A/C service data specification (auto	
ABS - Wiring diagram	BR-44	A/C).....	HA-126
ABS sensor rotor	AX-19	A/C service data specification (manual	
ABS/TCS C/U signal	EC-484	A/C).....	HA-215
Absolute pressure sensor	EC-163	A/C system description (auto A/C).....	HA-25
A/C air flow (auto A/C)	HA-27	A/C trouble diagnoses (auto A/C)	HA-29
A/C air flow (manual A/C)	HA-147	A/C trouble diagnoses (manual A/C)	HA-149
A/C component layout (auto A/C)	HA-21	A/C, A - Wiring diagram (auto A/C).....	HA-32
A/C component layout (manual A/C)	HA-145	A/C, M - Wiring diagram (manual A/C)	HA-152
A/C compressor clutch removal and		Accelerator control system	FE-3
installation (auto A/C).....	HA-113	Air bag	RS-16
A/C compressor clutch removal and		Air bag disposal.....	RS-30
installation (manual A/C).....	HA-202	Air bag precautions	GI-3
A/C compressor description (manual		Air bleeding (hydraulic clutch)	CL-7
A/C).....	HA-139	Air bleeding for brake system	BR-9
A/C compressor precaution (auto A/C)	HA-8	Air cleaner filter replacement.....	MA-17
A/C compressor precaution (manual		Air conditioner cut control	EC-31
A/C).....	HA-132	Air flow meter - See Mass air flow	
A/C compressor special service tool		sensor	EC-155
(auto A/C).....	HA-11	Air mix door control linkage adjustment	
A/C compressor special service tool		(auto A/C).....	HA-63
(manual A/C).....	HA-135	Air mix door control linkage adjustment	
A/C control linkage adjustment (manual		(manual A/C).....	HA-184
A/C)	HA-165, 184, 187	Air mix. door motor (auto A/C).....	HA-61, 107
A/C control operation (auto A/C).....	HA-25	Air mix. door motor (manual A/C)	HA-181
A/C control operation (manual A/C).....	HA-146	Air spoiler, rear.....	BT-40
A/C diagnostic work flow (auto A/C)	HA-47	Alternator	SC-30
A/C diagnostic work flow (manual A/C).....	HA-156	Ambient sensor (auto A/C).....	HA-94
A/C HFC134a (R134a) system precau-		Angular tightening application.....	EM-3
tion (auto A/C).....	HA-3	Antenna - See Power antenna	EL-185
A/C HFC134a (R134a) system precau-		Anti-lock brake system - See ABS.....	BR-39
tion (manual A/C).....	HA-127	Anti-lock brake system - Wiring	
A/C HFC134a (R134a) system service		diagram	BR-44
procedure (auto A/C)	HA-108	AP/SEN - Wiring diagram	EC-165
A/C HFC134a (R134a) system service		ASCD (automatic speed control device)	EL-203
procedure (manual A/C)	HA-196	ASCD - Wiring diagram	EL-207
A/C HFC134a (R134a) system service		A/T - Wiring diagram	AT-16
tools (auto A/C).....	HA-12	A/T - Wiring diagram - AT - FTS	AT-110
A/C HFC134a (R134a) system service		A/T - Wiring diagram - AT - MAIN.....	AT-99
tools (manual A/C).....	HA-136	A/T - Wiring diagram - AT - PNP/SW.....	AT-104
A/C HFC134a system service equip-		A/T - Wiring diagram - AT - VSS A/T	AT-116
ment precaution (auto A/C)	HA-8	A/T control	EC-446
A/C HFC134a system service equip-		A/T diagnosis communication line.....	EC-594
ment precaution (manual A/C).....	HA-132	A/T fluid temperature sensor.....	AT-108
A/C lubricant (R134a) (auto A/C)	HA-110	A/T self-diagnoses	AT-41, 49, 50
A/C lubricant (R134a) (manual A/C)	HA-198	A/T shift lock system	AT-270
A/C operational check (auto A/C)	HA-48	A/T shift lock system - Wiring diagram	AT-271
A/C operational check (manual A/C).....	HA-157	A/T trouble diagnoses	AT-55
A/C performance chart (auto A/C)	HA-85	A/T Wiring diagram - AT - ENG SS	AT-121
A/C performance chart (manual A/C).....	HA-175	A/T Wiring diagram AT - 1ST	AT-127
A/C performance test diagnoses (auto		A/T Wiring diagram AT - 2ND	AT-133
A/C).....	HA-83	A/T Wiring diagram AT - 3RD	AT-139
A/C performance test diagnoses		A/T Wiring diagram AT - 4TH.....	AT-146
(manual A/C).....	HA-173	A/T Wiring diagram AT - BA/FTS.....	AT-198
A/C relay (auto A/C)	HA-81	A/T Wiring diagram AT - LPSV	AT-168
A/C relay (manual A/C)	HA-194	A/T Wiring diagram AT - NONDTC	AT-216
		A/T Wiring diagram AT - OVRCSV	AT-193
		A/T Wiring diagram AT - SSV/A	AT-174
		A/T Wiring diagram AT - SSV/B	AT-179
		A/T Wiring diagram AT - TCCSIG	AT-159

ALPHABETICAL INDEX

A/T Wiring diagram AT - TCV	AT-153
A/T Wiring diagram AT - TPS.....	AT-185
A/T Wiring diagram AT - VSSMTR.....	AT-205
AT/C - Wiring diagram.....	EC-447
ATDIAG - Wiring diagram.....	EC-595
Audio	EL-171
AUDIO - Wiring diagram.....	EL-174
Audio and A/C control removal and installation - See Instrument panel	BT-28
Auto air conditioner - Wiring diagram (auto A/C).....	HA-32
Automatic amplifier (auto A/C)	HA-35, 51
Automatic speed control system - See ASCD	EL-203
Automatic transmission fluid replacement.....	MA-22
Automatic transmission number	GI-43
Auxiliary air control (AAC) valve	EC-429

B

Back-up lamp	EL-66
Back-up lamp switch (M/T)	MT-9
BACK/L - Wiring diagram.....	EL-66
Ball joint (front)	SU-13
Base idle air volume initialiging.....	EC-67
Basic inspection	EC-111
Battery	SC-4
Battery/Starting/Charging System Tester.....	SC-7, 13, 23
Baulk ring (M/T).....	MT-14
Blower and cooling unit (auto A/C).....	HA-118
Blower and cooling unit (manual A/C)	HA-207
Blower motor (auto A/C).....	HA-67
Blower motor (manual A/C).....	HA-167
Blower resistor (manual A/C)	HA-167
Board-on lift	GI-45
Body alignment	BT-63
Brake booster	BR-21
Brake control valve (Proportioning valve)	BR-12
Brake fluid change	BR-8
Brake fluid level	MA-25
Brake fluid level and line check	BR-8
Brake hydraulic line.....	BR-10
Brake inspection	MA-25
Brake lines and cables inspection	MA-25
Brake master cylinder	BR-15
Brake pedal	BR-13
Bulb specifications	EL-380
Bumper, front	BT-13
Bumper, rear	BT-16
BYPS/V - Wiring diagram	EC-578, 585

C

Camshaft inspection	EM-41
Camshaft position sensor (PHASE).....	EC-351

Canister-See EVAP canister	EC-32	
CHARGE - Wiring diagram	SC-22	
Charging system	SC-21	GI
Chassis and body maintenance	MA-21	
CHIME - Wiring diagram.....	EL-138	MA
CIGAR - Wiring diagram.....	EL-157	MA
Cigarette lighter.....	EL-157	
Circuit breaker.....	EL-17	EM
Closed loop control (Left bank).....	EC-476	EM
Closed loop control (Right bank)	EC-476	
Closed throttle position switch	EC-438	LC
Clutch cover	CL-15	
Clutch disc	CL-15	
Clutch fluid level.....	MA-21	EC
Clutch master cylinder	CL-8	
Clutch operating cylinder	CL-10	
Clutch pedal.....	CL-6	FE
Clutch release bearing.....	CL-13	
Clutch release mechanism	CL-13	
Clutch withdrawal lever.....	CL-13	CL
Coil spring (front).....	SU-9	
Coil spring (rear)	SU-22	
Collision diagnosis.....	RS-67	MT
Combination lamp, front, removal and installation	BT-13	
Combination lamp, rear, removal and installation	BT-40	AT
Combination meter	EL-111	
Combination meter removal and instal- lation - See Instrument panel.....	BT-28	AX
Combination switch.....	EL-30	
Component Location (auto A/C).....	HA-29	SU
Component Location (manual A/C).....	HA-149	
Compression pressure	EM-12	
Compressor clutch removal and instal- lation (auto A/C)	HA-113	BR
Compressor clutch removal and instal- lation (manual A/C).....	HA-202	ST
Compressor description (manual A/C)	HA-139	
Compressor precaution (auto A/C)	HA-8	
Compressor precaution (manual A/C).....	HA-132	RS
Compressor special service tool (auto A/C)	HA-11	
Compressor special service tool (manual A/C).....	HA-135	BT
Connecting rod.....	EM-62	
Connecting rod bearing clearance.....	EM-67	HA
Connecting rod bushing clearance	EM-67	
Connector inspection.....	GI-21	SC
Console box - See Instrument panel.....	BT-28	
CONSULT for ABS	BR-50	
CONSULT for engine	EC-91	EL
CONSULT for TCS	BR-93	
Control lever (M/T)	MT-12	
Control valve (A/T)	AT-312	
Converter housing installation.....	AT-375	
COOL/F - Wiring diagram	EC-316, 492	
Coolant mixture ratio.....	MA-12	
Coolant replacement.....	MA-14	
Cooling circuit (engine).....	LC-9	
Cooling fan control	EC-489	

ALPHABETICAL INDEX

Cooling fan control systemLC-18
Coupling sleeve (M/T)MT-14
“Crankcase emission control system -
See positive crankcase ventilation”EC-47
CrankshaftEM-64
Crankshaft position sensor (POS)EC-343
Crankshaft position sensor (POS)
chippingEC-523
Crankshaft position sensor (REF)EC-517
Crash zone sensorRS-22
Cruise control - See ASCDEL-203
Cylinder blockEM-59
Cylinder headEM-38
Cylinder head bolt tighteningEM-48

D

Data link connector for ConsultEC-91
Daytime light systemEL-45
Daytime running light - See Daytime
light systemEL-45
DEF - Wiring diagramEL-160
Desiccant Assembly (auto A/C)HA-119
Desiccant Assembly (manual A/C)HA-208
Detonation sensor - See Knock sensorEC-338
Diagnosis sensor unitRS-21
Diagnostic trouble code (DTC) for OBD
systemEC-8, 70
Diagnostic trouble code (DTC) inspec-
tion priority chartEC-124
Differential gear (FF A/T)AT-356
Differential gear (FF M/T)MT-14, 28
DimensionsGI-44
D/LOCK - Wiring diagramEL-242
Dome light - See Interior lampEL-86
Door glassBT-20
Door lockBT-24
Door mirrorBT-61
Door trimBT-35
Door, frontBT-19
Door, rearBT-19
Drive plate runoutEM-68
Drive shaft (front)AX-9
Dropping resistor (A/T)AT-166
DTC work supportEC-103
DTRL - Wiring diagramEL-49

E

ECM input/output signalEC-135
ECTS - Wiring diagramEC-176, 193
Electric sun roofEL-188
Electrical diagnosesGI-24
Electrical ignition systemEC-30
Electrical unitFoldout
Electrical units locationEL-353
EMNT - Wiring diagramEC-626
Engine compartmentBT-64

Engine control circuit diagramEC-24
Engine control component parts
locationEC-20
Engine control module (ECM)EC-449
Engine control system diagram and
chartEC-25
Engine coolant temperature sensor
(ECTS)EC-174, 191
Engine fail-safe systemEC-125
Engine mounting control (Front)EC-625
Engine oil filter replacementMA-18
Engine oil precautionsGI-7
Engine oil replacementMA-17
Engine outer component partsEM-9
Engine removalEM-56
Engine room - See Engine
compartmentBT-64
Engine serial numberGI-43
EVAP canisterEC-33
EVAP canister purge volume control
solenoid valveEC-32, 377, 533
EVAP canister vent control
valveEC-383, 545, 564
EVAP control system (small leak)
diagnosisEC-362, 402, 531
EVAP control system pressure sensorEC-390
EVAP control system purge flow moni-
toring diagnosisEC-553
EVAP vapor lines inspectionMA-20
Evaporative emission (EVAP) systemEC-32
Exhaust systemFE-10
Exhaust system inspectionMA-21
ExteriorBT-40

F

Fan control amp. (auto A/C)HA-69
Fan switch (manual A/C)HA-167
F/FOG - Wiring diagramEL-68
Final drive (FF A/T)AT-356
Final drive (FF M/T)MT-14, 28
Finisher, interior - See TrimBT-32
Finisher, trunk lidBT-39
Floor trimBT-32
Fluid temperature sensor (A/T)AT-108
FluidsMA-11
Flywheel (clutch)CL-15
Flywheel runoutEM-68
FO2H-L - Wiring diagramEC-242
FO2H-R - Wiring diagramEC-241
Fog lamp, frontEL-67
Fog lamp, front, removal and
installationBT-13
Fork rod (M/T)MT-15
Forward clutchAT-334
F/PUMP - Wiring diagramEC-620
Freeze frame dataEC-70
FRO2LH - Wiring diagramEC-200, 223, 234
FRO2RH - Wiring diagramEC-199, 222, 233
Front axleAX-2

ALPHABETICAL INDEX

Front bumper	BT-13
Front combination lamp removal and installation	BT-13
Front disc brake	BR-24
Front door	BT-19
Front fog lamp.....	EL-67
Front fog lamp removal and installation	BT-13
Front heated oxygen sensor (HO2S) (Left bank).....	EC-196, 205, 212, 219, 231
Front heated oxygen sensor (HO2S) (Right bank)	EC-196, 205, 212, 219, 231
Front heated oxygen sensor heater (Left bank).....	EC-239
Front heated oxygen sensor heater (Right bank)	EC-239
Front seat.....	BT-46
Front seat belt	RS-5
Front suspension.....	SU-2
Front washer	EL-151
Front wiper	EL-151
Fuel cut control (at no load & high engine speed).....	EC-32
Fuel gauge.....	EL-111
Fuel injection system (Left bank).....	EC-292, 300
Fuel injection system (Right bank)	EC-292, 300
Fuel line inspection	MA-16
Fuel precautions	GI-8
Fuel pressure check.....	EC-49
Fuel pressure regulator	EC-50
Fuel pressure release	EC-49
Fuel pump	EC-619
Fuel system	FE-4
Fuel tank temperature sensor	EC-307
Fuel tank vacuum relief valve	EC-33
FUELLH - Wiring diagram.....	EC-295, 303
FUELRH - Wiring diagram	EC-294, 302
Fuse	EL-17
Fuse block	Foldout
Fusible link	EL-17

G

Garage jack and safety stand	GI-46
Gauges	EL-111
Gear components (M/T)	MT-14
Generator - See Alternator.....	SC-30
Generic scan tool (GST)	EC-105
Glass	BT-20
Grease.....	MA-11
Ground distribution.....	EL-18

H

Harness connector.....	EL-5
Harness connector inspection	GI-21
Harness layout	EL-357
Hazard warning lamp.....	EL-72
Headlamp.....	EL-33

Headlamp removal and installation	BT-13
Headlining - See Roof trim	BT-37
Heated seat.....	BT-49, EL-201
Heater unit (heater core) (auto A/C).....	HA-117
Heater unit (heater core) (manual A/C).....	HA-206
Height (Dimensions)	GI-44
HFC134a (R134a) system precaution (auto A/C).....	HA-3
HFC134a (R134a) system precaution (manual A/C).....	HA-127
HFC134a (R134a) system service procedure (auto A/C)	HA-108
HFC134a (R134a) system service procedure (manual A/C).....	HA-196
HFC134a (R134a) system service tools (auto A/C).....	HA-12
HFC134a (R134a) system service tools (manual A/C).....	HA-136
HFC134a system service equipment precaution (auto A/C).....	HA-8
HFC134a system service equipment precaution (manual A/C).....	HA-132
High clutch.....	AT-329
H/LAMP - Wiring diagram	EL-37
Hood.....	BT-13
Horn	EL-156
HORN - Wiring diagram.....	EL-156
How to erase DTC for OBD system.....	EC-82
HSEAT - Wiring diagram.....	EL-201

I

IACV-AAC valve	EC-429
IATS - Wiring diagram	EC-171
Identification plate.....	GI-43
Idle air control valve (IACV)	EC-429
Idle mixture ratio.....	EC-53
Idle speed.....	EC-53
IGN/SG - Wiring diagram	EC-508
Ignition control system	EC-506
Ignition timing	EC-53
ILL - Wiring diagram	EL-79
Illumination	EL-77
In vehicle sensor (auto A/C).....	HA-98
INJECT - Wiring diagram	EC-610
Injector	EC-609
Injector removal and installation	EC-51
Input shaft (FF M/T)	MT-14, 19
Instrument panel	BT-28
Intake air temperature sensor	EC-169
Intake door control linkage adjustment (auto A/C).....	HA-66
Intake door control linkage adjustment (manual A/C).....	HA-165
Intake door motor (auto A/C)	HA-64
Intake door motor (manual A/C).....	HA-162
Intake manifold.....	EM-11
Intake sensor (auto A/C)	HA-105
Integrated homelink transmitter	EL-331
Interior	BT-32

ALPHABETICAL INDEX

Interior lampEL-86
 Interior lamp on-off control.....EL-88
 IVIS (Infiniti vehicle immobilizer system).....EL-334

J

Jacking points.....GI-46
 Joint connector (J/C)Foldout
 Junction box (J/B).....Foldout

K

Keyless entry system - See Multi-remote control systemEL-259
 Knock sensor (KS)EC-338
 Knuckle spindleAX-5
 KS - Wiring diagram.....EC-339

L

Length (Dimensions)GI-44
 License lampEL-57
 Lifting pointsGI-47
 Line pressure solenoid valveAT-166
 Line pressure test (A/T)AT-65
 Liquid gasket applicationEM-3
 LOAD - Wiring diagramEC-638
 Location of electrical unitsEL-353
 Lock, doorBT-24
 Low and reverse brakeAT-339
 Lubricant (R134a) A/C (auto A/C)HA-110
 Lubricant (R134a) A/C (manual A/C)HA-198
 LubricantsMA-11
 Lubrication circuit (engine)LC-4
 Lubrication-locks, hinges and hood latchesMA-27

M

MAFS - Wiring diagram.....EC-159
 Magnet clutch (auto A/C).....HA-76, 113
 Magnet clutch (manual A/C).....HA-202
 MAIN - Wiring diagram.....EC-148
 Mainshaft (M/T)MT-14, 24
 Maintenance (engine)MA-13
 MAJOR OVERHALL.....AT-286
 Malfunction indicator lamp (MIL).....EC-84
 Manual air conditioner - Wiring diagram (manual A/C).....HA-152
 Manual transmission oil replacementMA-21
 Mass air flow sensor (MAFS).....EC-155
 Master cylinder (brake)BR-15
 Master cylinder (clutch)CL-8
 Meter.....EL-111

METER - Wiring diagramEL-116
 MIL & Data link connectors circuitEC-642
 MIL/DL - Wiring diagramEC-642
 MIRROR - Wiring diagram.....EL-193
 Mirror defoggerEL-159
 Mirror, door.....BT-61
 MisfireEC-330
 Mode door control linkage adjustment (auto A/C).....HA-59
 Mode door control linkage adjustment (manual A/C).....HA-187
 Mode door motor (auto A/C)HA-54
 Mode door motor (manual A/C)HA-185
 Model variationGI-41
 Molding - See ExteriorBT-40
 M/T major overhaulMT-12
 M/T removal and installationMT-10
 MULTI - Wiring diagram.....EL-263
 Multi-remote control system.....EL-259
 Multiport fuel injection (MFI) systemEC-28
 Multiport fuel injection precautionsGI-6

N

NATS (Nissan anti-theft system) precautionsGI-3
 NATS - Wiring diagramEL-336
 NVH troubleshooting (AX)AX-3
 NVH troubleshooting (BR).....BR-7
 NVH troubleshooting (CL)CL-4
 NVH troubleshooting (M/T)MT-6
 NVH troubleshooting (ST).....ST-5
 NVH troubleshooting (SU).....SU-16
 NVIS (Nissan vehicle immobilizer system).....EL-334
 NVIS (Nissan vehicle immobilizer system) precautionsGI-3

O

Oil change (capacity)MA-11
 Oil pan (engine)EM-13
 Oil pressure (engine)LC-5
 Oil pump (A/T).....AT-308
 Oil pump (engine)LC-5
 Oil pump regulator valve (engine)LC-7
 Oil seal replacement (engine).....EM-35
 On board diagnostic systemEC-69
 Operating cylinder (clutch).....CL-10
 ORVR (On-board Refueling Vapor Recovery).....EC-38
 Overdrive control switch.....AT-260
 Overrun clutch.....AT-334
 Overrun clutch solenoid valve.....AT-191

ALPHABETICAL INDEX

P

P/ANT - Wiring diagram.....	EL-185
Park/Neutral position switch.....	EC-597
Park/neutral position switch (A/T).....	AT-102
Park/neutral position switch (M/T).....	MT-9
Parking brake control.....	BR-37
Parking lamp.....	EL-57
PCV (positive crankcase ventilation).....	EC-47
PGC/V - Wiring diagram.....	EC-379, 536
PHASE - Wiring diagram.....	EC-353
Piston assembly.....	EM-68
Piston pin inspection.....	EM-61
Piston ring inspection.....	EM-61
Piston to bore clearance.....	EM-63
PNP/SW - Wiring diagram.....	EC-599
POS - Wiring diagram.....	EC-345, 525
POWER - Wiring diagram.....	EL-10
Power antenna.....	EL-185
Power door lock.....	EL-240
Power door mirror.....	EL-193
Power seat.....	EL-197
Power steering fluid level.....	MA-26, ST-7
Power steering gear.....	ST-15
Power steering hydraulic pressure.....	ST-9
Power steering oil pressure switch.....	EC-629
Power steering oil pump.....	ST-25
Power steering system bleeding.....	ST-7
Power supply routing.....	EL-9
Power transistor & ignition coil.....	EC-506
Power window.....	EL-228
PRE/SE - Wiring diagram.....	EC-392
Precations for Leak detection dye (auto A/C).....	HA-4
Precations for Leak detection dye (manual A/C).....	HA-128
Precautions (General).....	GI-4
Pressure plate - See Clutch cover.....	CL-15
Pressure test (A/T).....	AT-65
PST/SW - Wiring diagram.....	EC-630

R

Radiator.....	LC-17, 18
Radio - See Audio.....	EL-171
Rear air spoiler.....	BT-40
Rear axle.....	AX-17
Rear axle (disc brake type).....	AX-19
Rear bumper.....	BT-16
Rear combination lamp removal and installation.....	BT-40
Rear disc brake.....	BR-28
Rear door.....	BT-19
Rear heated oxygen sensor (HO2S).....	EC-246, 256, 266, 276
Rear heated oxygen sensor (HO2S) heater.....	EC-285
Rear seat.....	BT-50

Rear seat belt.....	RS-9	
Rear suspension.....	SU-16	
Rear window.....	BT-59	GI
Rear window defogger.....	EL-159	
REF - Wiring diagram.....	EC-519	
Refrigerant pressure sensor (auto A/C).....	HA-81	MA
Refrigerant pressure sensor (manual A/C).....	HA-194	
Refrigerant connection precaution (auto A/C).....	HA-5	EM
Refrigerant connection precaution (manual A/C).....	HA-129	LC
Refrigerant discharging evacuating charging (auto A/C).....	HA-108	EC
Refrigerant general precaution (auto A/C).....	HA-4	
Refrigerant general precaution (manual A/C).....	HA-128	FE
Refrigerant lines (auto A/C).....	HA-120	
Refrigerant lines (manual A/C).....	HA-209	CL
Refrigerant pressure sensor.....	EC-634	
Refrigeration cycle (auto A/C).....	HA-15	
Refrigeration cycle (manual A/C).....	HA-139	MT
Release bearing (clutch).....	CL-13	
Removal and installation (A/T).....	AT-283	
Reverse clutch.....	AT-326	AT
Reverse idler shaft (M/T).....	MT-14	
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T).....	MT-9	AX
Reverse main gear (M/T).....	MT-14	
Revolution sensor (A/T).....	AT-114	
RO2H-L - Wiring diagram.....	EC-288	SU
RO2H-R - Wiring diagram.....	EC-287	
Road wheel size.....	GI-44	
Roof trim.....	BT-37	BR
Room lamp - See Interior lamp.....	EL-86	
ROOM/L - Wiring diagram.....	EL-90	
RRO2LH - Wiring diagram.....	EC-250, 260, 270, 280	ST
RRO2RH - Wiring diagram.....	EC-249, 259, 269, 279	

S

SAE J1930 terminology list.....	GI-50	BT
Seal - See Exterior.....	BT-40	
SEAT - Wiring diagram.....	EL-198	HA
Seat belt inspection.....	MA-27, RS-11	
Seat belt pre-tensioner.....	RS-3	
Seat belt pre-tensioner disposal.....	RS-30	SC
Seat belt, front.....	RS-5	
Seat belt, rear.....	RS-9	
Seat, front.....	BT-46	EL
Seat, rear.....	BT-50	
SHIFT - Wiring diagram.....	AT-271	
Shift control components (M/T).....	MT-15	
Shift fork (M/T).....	MT-15	
Shift lever.....	MT-12	
Shift lock system.....	AT-270	
Shift schedule.....	AT-382	
Shift solenoid valve A (A/T).....	AT-172	
Shift solenoid valve B (A/T).....	AT-177	

ALPHABETICAL INDEX

Shock absorber (front)	SU-10	TCS component parts and connector location	BR-84
Shock absorber (rear)	SU-22	TCS control unit	BR-83
Side air bag	RS-28	TCS self-diagnosis	BR-91
Side trim	BT-32	TCS system components	BR-82
Smart entrance control unit	EL-322	TCS trouble diagnoses.....	BR-101
SMJ (super multiple junction)	Foldout	TCS wheel sensors	BR-84
Spare tire size	GI-44	TFTS - Wiring diagram.....	EC-309
Spark plug replacement.....	MA-18	THEFT - Wiring diagram.....	EL-296
Speedometer	EL-111	Theft warning system.....	EL-288
Spiral cable.....	RS-24	Thermostat.....	LC-15
Spring (Wheelarch) height	SU-6	Three way catalyst function (Left bank).....	EC-357
SROOF - Wiring diagram	EL-189	Three way catalyst function (Right bank).....	EC-357
SRS - See Supplemental Restraint System.....	RS-16	Three way catalyst precautions.....	GI-6
SRS - Wiring diagram	RS-43	Throttle bodies.....	EM-11
S/SIG - Wiring diagram	EC-616	Throttle position sensor (TPS)	EC-179
Stabilizer bar (front).....	SU-11	Throttle position sensor adjustment.....	EC-111
Stall test (A/T)	AT-61	Throttle position switch	EC-438, AT-182, 260
Standardized relay	EL-7	Throwout bearing - See Clutch release bearing	CL-13
START - Wiring diagram.....	SC-11	Tie-rod.....	ST-15
Start signal	EC-615	Tie-rod ball joints.....	ST-19
Starter.....	SC-19	Tightening torque of standard bolts.....	GI-49
Starting system.....	SC-10	Timing chain.....	EM-19
Steering gear and linkage inspection	MA-26	Tire rotation.....	MA-24
Steering linkage	ST-15	Tire size	GI-44
Steering switch.....	EL-32	Torque converter installation.....	AT-284, 375
Steering wheel and column	ST-10	Torque convertor clutch solenoid valve.....	AT-151
Steering wheel play	ST-6	Tow truck towing.....	GI-48
Steering wheel turning force.....	ST-8	TP/SW - Wiring diagram	EC-441
Stop lamp.....	EL-65	TPS - Wiring diagram.....	EC-184
STOP/L - Wiring diagram.....	EL-65	Traction control system - See TCS.....	BR-81
Striking rod (M/T)	MT-15	Traction control system - Wiring diagram.....	BR-85
Strut (front)	SU-9	Transaxle serial number.....	GI-43
Strut (rear).....	SU-20	Transmission case (M/T).....	MT-13
Sun roof, electric.....	EL-188	TRANSMT - Wiring diagram.....	EL-331
Sunload sensor (auto A/C).....	HA-101	Tread-FR&RR (Dimensions).....	GI-44
Sunroof.....	BT-51	Trim	BT-32
Supplemental Restraint System.....	RS-16	Trouble diagnoses	GI-34
Supplemental restraint system - Wiring diagram.....	RS-43	Trunk lid	BT-16
S/VCSW - Wiring diagram	EC-480	Trunk lid finisher.....	BT-39
Swirl control valve control solenoid valve	EC-453	Trunk lid opener - See Trunk lid.....	BT-16
Swirl control valve control vacuum check switch	EC-478	Trunk lid trim	BT-39
SWL/V - Wiring diagram	EC-457	Trunk room trim.....	BT-39
Symbols and abbreviations	GI-9	TURN - Wiring diagram	EL-74
Symptom matrix chart	EC-126	Turn signal lamp	EL-72
Synchronizer (M/T).....	MT-14	Two trip detection logic	EC-69
System readiness test (SRT) code	EC-71	Two-pole lift	GI-47

T

Tachometer	EL-111
Tail lamp.....	EL-57
TAIL/L - Wiring diagram	EL-59
TCM circuit diagram.....	AT-16
TCM inspection table	AT-95
TCS (traction control system)	BR-81
TCS - Wiring diagram	BR-85

U

Under body	BT-66
------------------	-------

V

Vacuum cut valve	EC-32
------------------------	-------

ALPHABETICAL INDEX

Vacuum cut valve bypass valve.....EC-32, 576, 582
 Vacuum hose (brake system).....BR-23
 Vacuum hose drawing (Engine control)EC-26
 Valve clearance.....EM-51
 Valve guide.....EM-43
 Valve seat.....EM-44
 Valve spring.....EM-45
 Vehicle recovery (freeing a stuck
 vehicle).....GI-48
 Vehicle speed sensor (VSS)EC-425
 VENT/V - Wiring diagramEC-385, 547, 567
 VIASEC-603
 VIAS - Wiring diagramEC-605
 Viscosity number (SAE)MA-11
 Viscous coupling (FF A/T).....AT-356
 Viscous coupling (FF M/T).....MT-9, 14
 VSS - Wiring diagramEC-427

W

WARN - Wiring diagramEL-129
 Warning chimeEL-136
 Warning lampsEL-128
 Washer, front.....EL-151
 Water pump.....LC-11
 Water temperature gauge.....EL-111

Weatherstrip - See ExteriorBT-40
 Wheel alignment (front).....SU-6
 Wheel alignment (rear).....SU-18
 Wheel balanceMA-23
 Wheel bearing (front).....AX-4
 Wheel bearing (rear)AX-18
 Wheel hub (front).....AX-5
 Wheel hub (rear)AX-19
 Wheel sensors (ABS).....BR-155
 Wheel sensors (TCS).....BR-155
 Wheelarch heightSU-6
 Wheelbase (Dimensions)GI-44
 Wide open & closed throttle position
 switchEC-179
 Width (Dimensions)GI-44
 WINDOW - Wiring diagramEL-231
 Window, rearBT-59
 Windshield.....BT-59
 WIPER - Wiring diagramEL-153
 Wiper, front.....EL-151
 Wiring Diagram (Cell code) list.....EL-381
 Wiring diagram - AT - LAN.....AT-210
 Wiring diagramsGI-11
 Withdrawal lever (clutch)CL-13
 Wrist pin - See Piston pin inspection.....EM-61

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
 AT

 AX

 SU

 BR

 ST

 RS

 BT

 HA

 SC

 EL

NOTES